

26.01.2025

Brukermanual / User Manual FJERNSTYRT STOPP / REMOTE CONTROL STOP

- 301204



Please note that due to variations or special requirements in the various markets, there may be additional information as appendices or included in the user guide.

For the visually impaired, this and other guides can be downloaded from our website and enlarged on a PC or other electronic aid.



Figur 1. Fjernstyrt stopp - mottaker



Figur 2. Fjernstyrt stopp - sender

Mottakerenhet

Ved spenningstilkopling, eller hvis 'ON LED' ikke lyser, er mottakerenheten deaktivert - kjørestilling.

- Trykk <ON/OFF> inntil 'ON LED' lyser (< 1sekund) for å aktivere mottakerenhet.
- Trykk <ON/OFF> inntil 'ON LED' slukker (< 3sekund) for å deaktivere mottakerenhet 'CONNECT LED' viser Rf-Stop status.
- 'CONNECT LED' lyser – kjørestilling (rele deaktivert).
- 'CONNECT LED' av – stoppstilling (rele aktivert)

Senderenhet

ON/OFF/STOPP funksjon og lade- /batteri status.

- Aktivere – Trykk <ON/STOP> inntil TX LED begynner å blinke (< 1sekund). Sender 'CONNECT' melding to ganger i sekundet.
- Deaktivere – Trykk <ON/STOP>. Sender 'STOP' melding umiddelbart. Senderenhet er i av stilling når bryteren er uoperert.
- 'BAT LED' viser lade- /batteristatus. Lyser fast inntil fulladet batteri. Blinker ved svakt batteri, hvis senderenhet er aktiv.

Sender- /mottaker parring og bruk

Mottakerenhet i aktiv tilstand og senderenhet i av tilstand.

- Trykk <LEARN> inntil 'CONNECT LED' blinker (< 3sekund). Parring modus er aktivt inntil 10 sekunder.
- Aktiver senderenhet ved å trykke <ON/STOP>.
- Mottakerenhet aktiverer 'CONNECT LED' ved gyldig parring.
- Enheten er klar til bruk, trykk <ON/STOP> når det er behov for å stoppe kjøring av stolen.



Figur 1. Remote control stop - receiver



Figur 2. Remote control stop - transmitter

Receiver Unit

When power is connected, or if the 'ON LED' does not light up, the receiver unit is deactivated – drive mode.

- Press <ON/OFF> until the 'ON LED' lights up (< 1 second) to activate the receiver unit.
- Press <ON/OFF> until the 'ON LED' turns off (< 3 seconds) to deactivate the receiver unit. The 'CONNECT LED' indicates the RF-Stop status.
- 'CONNECT LED' on – drive mode (relay deactivated).
- 'CONNECT LED' off – stop mode (relay activated).

Transmitter Unit

ON/OFF/STOP function and charge/battery status.

- To activate – Press <ON/STOP> until the TX LED starts blinking (< 1 second). The unit sends a 'CONNECT' message twice per second.
- To deactivate – Press <ON/STOP>. The unit sends a 'STOP' message immediately. The transmitter unit is in the off state when the switch is not operated.
- The 'BAT LED' shows the charging/battery status. It lights up steadily when the battery is fully charged. It blinks when the battery is low, if the transmitter unit is active.

Transmitter/Receiver Pairing and Use

Receiver unit in active state and transmitter unit in off state.

- Press <LEARN> until the 'CONNECT LED' blinks (< 3 seconds). Pairing mode is active for up to 10 seconds.
- Activate the transmitter unit by pressing <ON/STOP>.
- The receiver unit activates the 'CONNECT LED' when pairing is successful.
- The device is ready for use. Press <ON/STOP> when you need to stop the movement of the chair.

Label serial number

Baldertech AS
Email : info@baldertech.com
Telephone : +47 32 11 11 00
www.baldertech.com

baldertech